


Sensor Quick Start Guide


ADAM Sensor Adhesive Prep

1

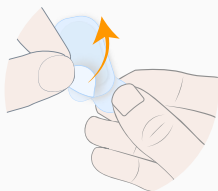


Peel off one side of the clear liner.

2

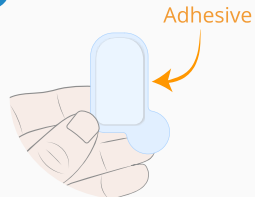


Adhesive exposed on the clear liner.

3

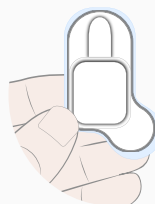

Attach sensor to adhesive.

4

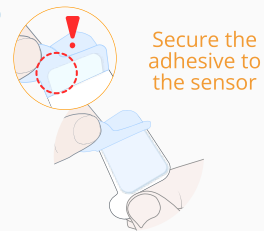

Secure the adhesive and peel off the second liner.


5



Sensor ready to apply


ADAM Back Hand Placement

1

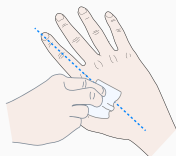


Clean the back of your hand.

2

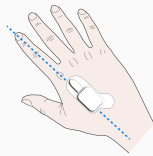

Place the sensor on the back of your hand, pointing toward your index finger.

3

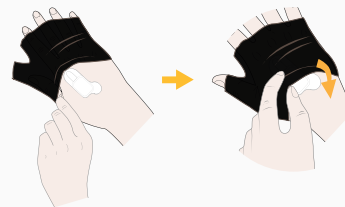

4

